

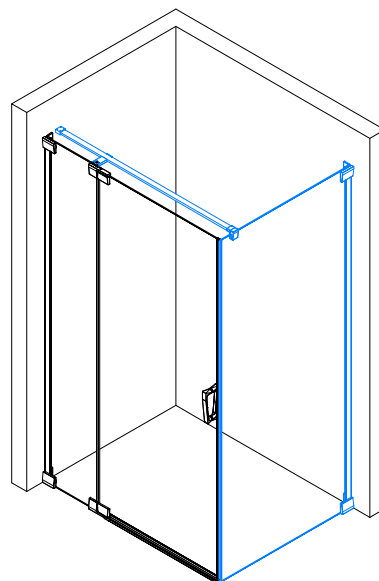
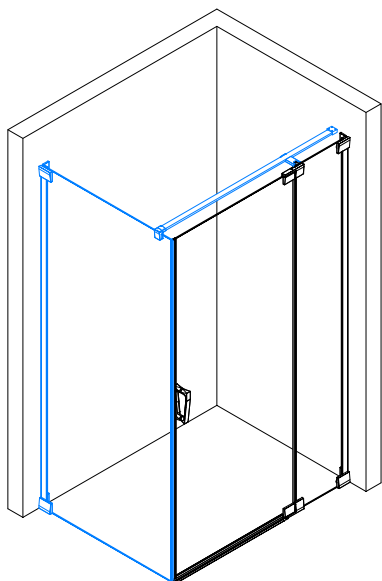
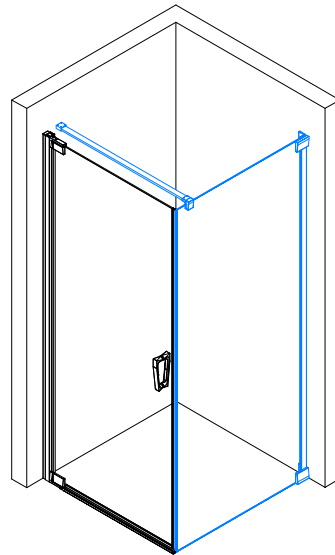


19669

DE	MONTAGEANLEITUNG:	SEITENWAND
GB	INSTALLATION INSTRUCTIONS:	FIXED PANEL
FR	NOTICE DE MONTAGE:	PAROI FIXE
CZ	NÁVOD K MONTÁŽI:	BOČNÍ STĚNA
PL	INSTRUKCJA MONTAŻU:	ŚCIANA BOCZNA
SK	NÁVOD NA MONTÁŽ:	BOČNÁ STĚNA
RU	ИНСТРУКЦИЯ ПО МОНТАЖУ:	ФИКСИРОВАННАЯ СТЕНКА
ES	INSTRUCCIONES DE MONTAJE:	LATERAL FIJO
RO	INSTRUCȚIUNI DE MONTAJ:	PERETE LATERAL

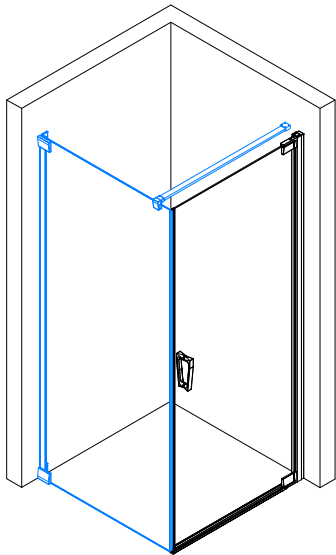

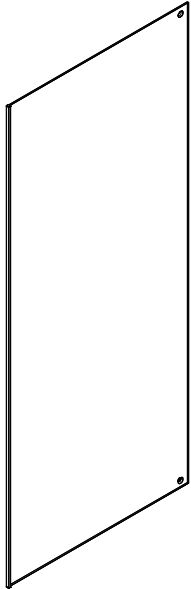

50015E1XX. 1984	42356. 1967	52203U2 1000.F	50314. XX.1400	31107.1

 3 x 14001 4.2X38mm	 3 x 16000 ø 6mm
 2X 14152	 2 X 54164.XX
 2X 54162	 2X 54163
 2X 51580.XX	 2X 51209
	 2+2.5 +3mm

