

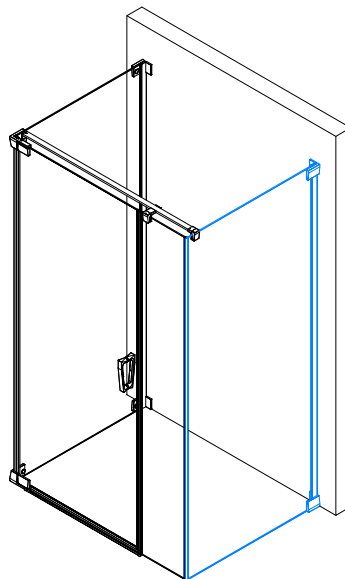
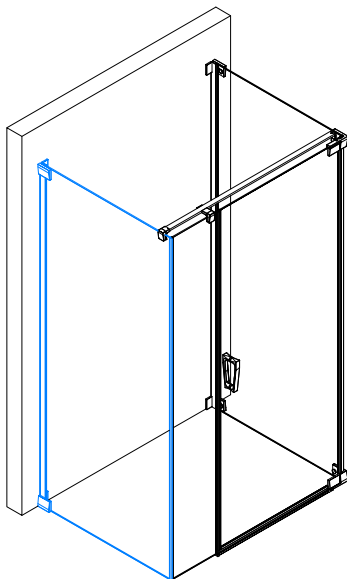
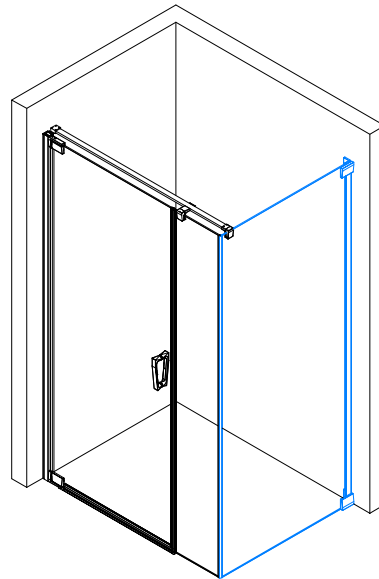
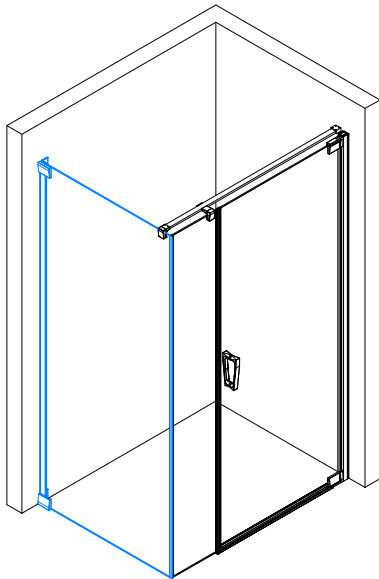


19678

DE	MONTAGEANLEITUNG:	SEITENWAND
GB	INSTALLATION INSTRUCTIONS:	FIXED PANEL
FR	NOTICE DE MONTAGE:	PAROI FIXE
CZ	NÁVOD K MONTÁŽI:	BOČNÍ STĚNA
PL	INSTRUKCJA MONTAŻU:	ŚCIANA BOCZNA
SK	NÁVOD NA MONTÁŽ:	BOČNÁ STĚNA
RU	ИНСТРУКЦИЯ ПО МОНТАЖУ:	ФИКСИРОВАННАЯ СТЕНКА
ES	INSTRUCCIONES DE MONTAJE:	LATERAL FIJO
RO	INSTRUCȚIUNI DE MONTAJ:	PERETE LATERAL

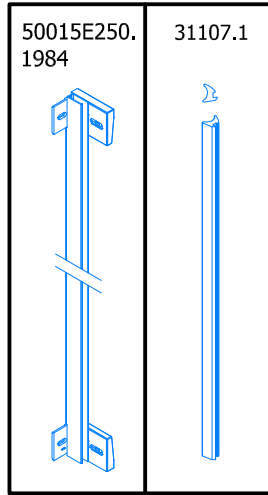

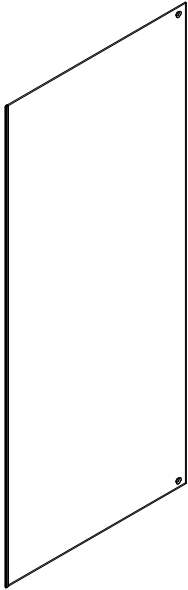

<p>4 x 14001 4.2X38mm</p>	<p>4 x 16000 ø 6mm</p>
<p>2X 14152</p>	<p>2 X 54164.10</p>
<p>2X 54162</p>	<p>2X 54163</p>
<p>2X 51580.10</p>	<p>2X 51209</p>

